

**UFL-510    UFL-520    UFL-540**

# Water Filtration Owner's Manual

Original Instructions

**Manufacturing Numbers:**

9710124, 9710125, 9710126



System Tested and Certified by NSF  
International against NSF/ANSI  
Standard 42 and 53 for the reduction of:

Standard No. 42: Aesthetic Effects  
Nominal Particulate Reduction Class I

Standard No. 53: Health Effects  
Cyst Reduction & Turbidity Reduction as  
verified and substantiated by test data.

# UFL-500 SERIES

## Contents

|                                     |           |
|-------------------------------------|-----------|
| <b>Introduction</b>                 | <b>2</b>  |
| Before Use                          | 2         |
| In Case of Damage                   | 2         |
| <b>Service/Technical Assistance</b> | <b>2</b>  |
| <b>Safety Information</b>           | <b>3</b>  |
| Installation                        | 3         |
| Operation                           | 3         |
| Maintenance                         | 3         |
| Service                             | 3         |
| Safety Information (Continued)      | 4         |
| <b>Specifications</b>               | <b>5</b>  |
| Performance Claims                  | 6         |
| <b>Overview</b>                     | <b>7</b>  |
| Manual Flushing                     | 7         |
| <b>Unpacking</b>                    | <b>8</b>  |
| <b>Equipment Setup</b>              | <b>8</b>  |
| General                             | 8         |
| Electrical                          | 8         |
| Plumbing                            | 8         |
| Installation Tools and Supplies     | 8         |
| <b>Installation</b>                 | <b>9</b>  |
| Mounting the System                 | 9         |
| Drain Valve Connection              | 10        |
| System Inlet Connection             | 11        |
| Permeate Outlet Connection          | 11        |
| Inlet Water Plumbing                | 11        |
| Installing a Bypass                 | 11        |
| Starting the Controller             | 11        |
| Sanitizing the System and Lines     | 12        |
| Rinsing the UltraFilter Cartridge   | 12        |
| <b>Maintenance</b>                  | <b>13</b> |
| Replacing the UltraFilter Cartridge | 13        |
| Changing the Interval Setting       | 14        |
| Resetting the Timer Program         | 14        |
| <b>Troubleshooting</b>              | <b>15</b> |
| <b>Replacement Parts</b>            | <b>16</b> |
| Parts list                          | 16        |
| <b>Exploded View</b>                | <b>17</b> |
| <b>Limited Warranty</b>             | <b>18</b> |

## Introduction

2 The UFL system is an innovative filtration  
2 system that uses proprietary multi-bore  
2 hollow fiber membranes to provide the  
2 latest innovation in filtration technology.

### Before Use

3 This manual provides the safety,  
3 installation, and operating procedures  
4 for the UFL water filtration system. All  
5 information contained in this manual  
6 should be read prior to installing and  
7 operating the system. Your UFL system  
7 is manufactured from the finest materials  
8 available and is assembled to strict  
8 quality standards. This system has  
8 been tested at the factory to ensure  
8 dependable trouble-free operation.

### In Case of Damage

9 If the unit arrives damaged, file a claim  
9 with the carrier immediately. Save  
10 all packing materials when filing a  
11 claim. Freight damage claims are the  
11 responsibility of the purchaser and are  
11 not covered under warranty.

#### IMPORTANT

Antunes reserves the right to change specifications and product design without notice. Such revisions DO NOT entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

#### IMPORTANT

Keep these instructions for future reference. If the system changes ownership, be sure this manual accompanies the equipment.

## Service/Technical Assistance

If there are any problems with the installation or operation of the unit, contact Antunes Technical Service at +1-877-392-7854 (toll free).

Fill in this information and have it handy when calling for assistance. The serial number is on the specification plate located on the unit.

\_\_\_\_\_  
Purchased from

\_\_\_\_\_  
Date of purchase

\_\_\_\_\_  
Model number

\_\_\_\_\_  
Serial number

\_\_\_\_\_  
Manufacturing number

Suggested replacement period for the UltraFilter Cartridge is approximately 5-7 years (dependent on water quality).

For sales in the state of Iowa:

\_\_\_\_\_  
Seller

\_\_\_\_\_  
Date

\_\_\_\_\_  
Buyer

\_\_\_\_\_  
Date

## Safety Information

### Installation

- Read and understand all instructions before installing or using the unit.
- Install and locate the equipment only for its intended use as described in this manual.
- This equipment is to be installed to comply with the local plumbing code and any other applicable code.
- This equipment should be supplied with only cold water.
- Water pressure must not exceed 100 psig (690 kPa). To reduce water pressure, install a water pressure regulator and set to suit the application.
- The trans membrane pressure (inlet pressure minus the permeate water pressure) must not exceed 45 psi (310 kPa).
- A ground fault circuit interrupter (GFCI) must be installed on the circuit to this system.
- When installed on metallic plumbing, a properly sized electrical bonding jumper must be installed across the inlet and outlet pipes serving this unit.
- For installations in Massachusetts, the Commonwealth of Massachusetts Plumbing Code 248 CMR shall be adhered to. The use of saddle valves are not permitted. Please consult your local plumber.

**NOTE:** If the inlet water pressure is less than 50 psig (345 kPa), it is recommended that a suitably-sized booster system (outlet pressure 60 psig - 100 psig max (414 kPa - 690 kPa max) be installed.



### WARNING

**ELECTRICAL SHOCK HAZARD.**  
**Failure to follow the instructions in this manual could result in serious injury or death.**

DO NOT modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

DO NOT use an extension cord with this unit.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person.

All electrical connections must be in accordance with local electrical codes and any other applicable codes.

### Operation

- DO NOT operate the unit if it has been damaged or dropped, if it has a damaged cord or plug, or if it is not working properly.
- DO NOT block or cover any openings on the equipment.
- DO NOT immerse the cord, unit, or power plug in water.
- Keep the cord away from heated surfaces.

### Maintenance

- DO NOT use corrosive chemicals in this equipment.
- DO NOT clean the unit with a water jet or steam cleaner.

### Service

- Unplug the power cord before performing any service or maintenance on the unit.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid an electrical hazard.
- This equipment should be serviced by qualified personnel only. Contact Antunes for repair.

# UFL-500 SERIES

## Safety Information (Continued)

### Protect from becoming dry

If the membrane dries out, irreversible damage to the UltraFilter membrane may result. Protect the filter from becoming dry by keeping it wet and sealed at all times.

### Protect from freezing

If the UltraFilter membrane freezes during operation or storage, irreversible damage to the membrane and brittle cracking of the cartridge or housing may result.

### Protect from direct sunlight or other UV sources

Avoid long-term exposure to direct sunlight or other UV sources. The UltraFilter should be stored in a dark location.

### Protect from high temperatures or abrupt variation in temperature

The maximum operating temperature is 100°F (38°C). Avoid abrupt variations in temperature. Any temperature variation should be made slowly.

### Protect from rough handling or dropping

Mechanical damage, external breakage, and/or internal breakage of the filter can result if the system is dropped or bumped. Handle with care at all times during transportation and installation.

### Protect from organic solvents and concentrated acids

Prevent any and all contact of the membrane with strong solvents, solvents containing chlorine, or concentrated acids. DO NOT use strong solvents or concentrated acids on any plastic parts of the filter system. Examples of some solvents to avoid: acetone, methyl acetate (nail polish remover); hexane (spot removers); turpentine, toluene (paint thinners); dry cleaning solutions, insecticides.

### Protect from abrasive material

The membranes must be protected from abrasive materials like shavings left in a pipe. Abrasive materials in contact with the membrane can cause irreversible damage to the membrane. All pipes must be flushed clean before installing the filter. All plastic parts of the filter system must be protected from sharp objects like knives, sand paper, or other tools. Cutting or nicking a plastic part can weaken it and cause a leak. DO NOT use abrasive cleansers on any plastic parts.

### Protect from water hammer

The system must be protected from shock, pressure surges, or pulsation that may occur inside water pipes. Water hammer occurs in pipes when a valve or faucet shuts quickly. Install a water hammer arrestor (pressure vessel containing compressed air separated from the water by a diaphragm) to reduce pressure shock.

### ⚠ Caution ⚠

This equipment is to be installed to comply with the basic plumbing code of the Building Officials and Code Administrators, Inc. (BOCA) and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).

### ⚠ Caution ⚠

Water Flow Regulator Assemblies are NOT interchangeable. Operating the system with the wrong Water Flow Regulator or without a regulator can damage the system, cause personal injury, and voids the warranty!

### ⚠ Caution ⚠

All electrical connections must be in accordance with local electrical codes and any other applicable codes.

A ground fault circuit interrupter (GFCI) must be installed on the circuit to this system.

When installed on metallic plumbing, a properly sized electrical bonding jumper must be installed across the inlet and outlet pipes serving this unit.

## Specifications

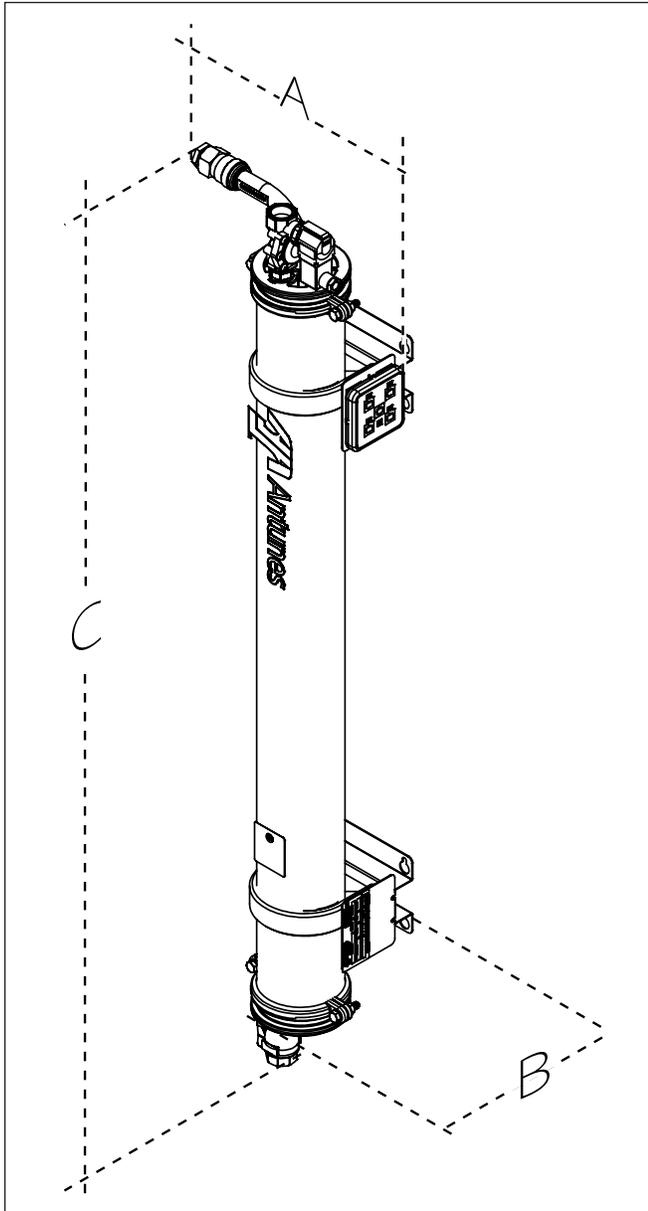


Figure 1. System Dimensions

| Model   | System Dimensions |           |            |
|---------|-------------------|-----------|------------|
|         | Width (A)         | Depth (B) | Height (C) |
| UFL-510 | 11 1/4"           | 6 1/8"    | 23"        |
| UFL-520 | 11 1/4"           | 6 1/8"    | 30"        |
| UFL-540 | 11 1/4"           | 6 1/8"    | 49"        |

| Electrical Ratings  |       |                               |       |
|---|-------|-------------------------------|-------|
| Volts   | Watts | Amps                          | Hertz |
| 100-240   | 10    | .08                           | 50/60 |
| Electrical Cord & Plug Configurations   |       |                               |       |
| Kit Model Number/Description  |       | Configuration                 |       |
| Kit 0012146<br>DC Power Supply<br>100 - 240 VAC<br>(Includes the 4 plug adaptors below) |       | <br>NOTE: PLUG STYLE MAY VARY |       |
| US<br>NEMA 1-15 (2 pin)<br>or NEMA 5-15<br>(3 Pin)                                      |       |                               |       |
| Euro<br>CEE 7/16  |       |                               |       |
| AS/NZS<br>3112<br>AUS<br>(2 Pin)  |       |                               |       |
| UK<br>BS 1363   |       |                               |       |
| <b>NOTE:</b> Includes plug adaptors for US, Europe, Australia, and UK.                  |       |                               |       |

| Model   | Drain must accommodate flow up to: |
|---------|------------------------------------|
| UFL-510 | 5.2 gpm                            |
| UFL-520 | 8 gpm                              |
| UFL-540 | 15 gpm                             |

| Model   | Replacement Cartridges |
|---------|------------------------|
|         | UltraFilter            |
| UFL-510 | 7001915 L-410          |
| UFL-520 | 7001917 L-420          |
| UFL-540 | 7001916 L-440          |

# UFL-500 SERIES

## Filter Cartridge Capacities

|                                   |                    |
|-----------------------------------|--------------------|
| Maximum Operating Pressure        | 100 psig (690 kPa) |
| Maximum Operating Temperature     | 100°F (38°C)       |
| Minimum Operating Temperature     | 40°F (4°C)         |
| Maximum Trans Membrane Pressure   | 45 PSI (3.1 Bar)   |
| pH Range                          | 3-10               |
| MWCO                              | 100 kD             |
| NSF Certified Rated Service Flow: |                    |
| UFL-510                           | 5.2 gpm (19.7 l/m) |
| UFL-520                           | 7.9 gpm (30 l/m)   |
| UFL-540                           | 13 gpm (49 l/m)    |

## Performance Claims for Percent Reduction

| Substance                                     | Influent Challenge Concentration | Reduction Requirement | Minimum % Reduction |
|---|----------------------------------|-----------------------|---------------------|
| cyst <sup>1</sup>                             | Minimum 50,000/L                 | 99.95%                | 99.95%              |
| Turbidity                                     | 11 ± 1 NTU                       | ≤ 0.5 NTU             | 99.1%               |
| Particulate Class I<br>Particles 0.5 to < 1µm | At least 10,000 particles /mL    | ≥ 85%                 | 99.5%               |

<sup>1</sup>based on the use of microspheres or *Cryptosporium parvum* oocysts

**NOTE:** The NSF information provided applies to the UltraFilter cartridge.



System Tested and Certified by NSF International against NSF/ANSI Standard 42 and 53 for the reduction of:

Standard No. 42: Aesthetic Effects  
Nominal Particulate Reduction Class I

Standard No. 53: Health Effects  
Cyst Reduction & Turbidity Reduction  
as verified and substantiated by test data.

This system has been tested according to NSF/ANSI Standard 42 and 53 for reduction of the substances listed below. The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI 42 or 53. While testing was performed under standard laboratory conditions, actual performance may vary.

DO NOT use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.

## Overview

The UFL system operates in two modes:

- Normal Operation Mode
- Flush Mode

During Normal Operation Mode, water enters the Inlet and flows through the UltraFilter before exiting the Permeate Outlet as usable product water.

During Flush Mode, the Drain Valve opens and water entering the Inlet flushes and cleans the UltraFilter membrane by removing any debris collecting on the membrane wall.

The Drain Valve is only powered during Flush Mode.

**NOTE: DO NOT unplug the power cord or turn off the system during Flush Mode. If there is a power outage or the system is unplugged, water will continue to be filtered but the system will NOT flush. This could cause the UltraFilter to plug prematurely and may reduce the life of the filter.**

### ⚠ Caution ⚠

Changing the flush interval can cause the UltraFilter to plug prematurely and may reduce the life of the filter. Consult the factory for more information.

## Manual Flushing

A manual flush can be activated at any time by pressing the **FLUSH** button on the Universal Pulse Controller.

When the **FLUSH** button is pressed, the Flush LED on the controller flashes and the Drain Valve opens for 10 seconds. After flushing is complete, the Drain Valve will close, the Flush LED will stop flashing and the unit will automatically return to Normal Operation Mode.

**NOTE: A manual flush will not affect the interval flush setting.**

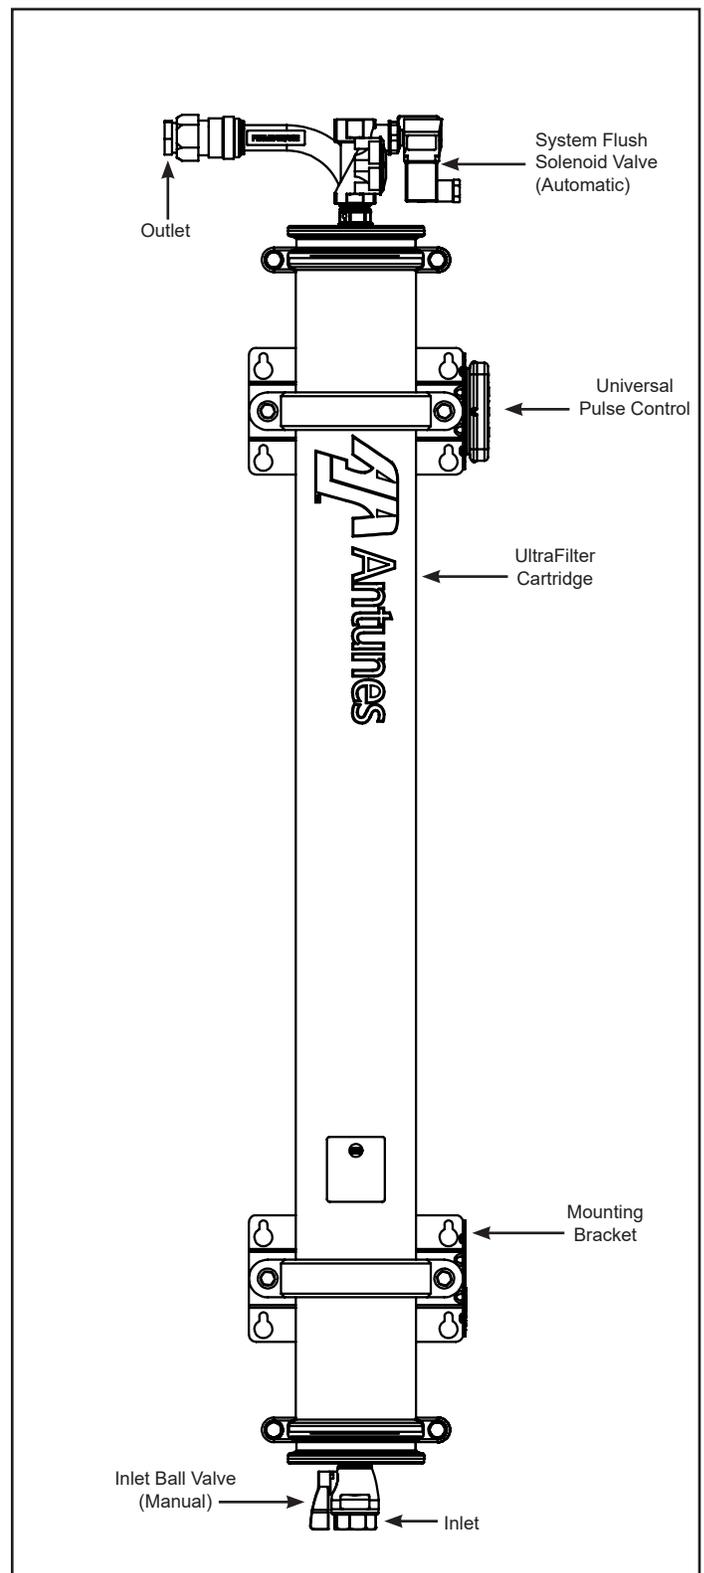


Figure 2. System Components

# UFL-500 SERIES

## Unpacking

1. Open the large box. It should contain:
  - A. Bracket mounted UFL system with an UltraFilter Cartridge installed.
  - B. Padded envelope containing:
    - Power Adaptor
    - Owner's Manual
    - Glove and Sticker Kit
2. Remove all packing materials and protective coverings from the system.
3. Remove the information packet. Fill out and mail the warranty card immediately to prevent any delay in obtaining warranty coverage.

**NOTE:** If any parts are damaged, contact Antunes IMMEDIATELY at +1-877-392-7854.

## Equipment Setup

### General

When placing the system into service, pay attention to the following guidelines:

- DO NOT immerse cord or power plug in water
- Keep cord away from heated surfaces.

### Electrical

The line voltage must match the voltage on the specification label. The plug on the power cord must match the appropriate outlet. DO NOT connect the system to a switched electrical outlet.

### Plumbing

**NOTE:** The system must be connected to the COLD water line. DO NOT connect the system to the hot water line.

The UFL system uses the following connections:

|                               |           |
|-------------------------------|-----------|
| System Inlet                  | 3/4" FNPT |
| System Outlet (Product Water) | 3/4" FNPT |
| Drain                         | 3/4" FNPT |

When making a plumbing connection to the system, use a back-up wrench on the supporting plumbing. Always use a quality, approved pipe sealant or thread seal tape on pipe threads. DO NOT allow pipe sealant inside pipes.

DO NOT over tighten the connections. Use plastic fittings when connecting to the plastic connections of the system.

If soldered plumbing is used, DO NOT apply heat to, or near, the filtration system. Use union (O-Ring seal) connections for ease of installation and future servicing.

### Suggested Tools and Supplies for Installation

The following tools and supplies are suggested to help with the installation:

- Screwdriver
- Drill with Bits
- Tape Measure
- Two Gallon Bucket
- Pipe Wrenches
- Fresh, Unscented Liquid Chlorine Bleach
- Adjustable Wrenches
- Level
- Pipe Dope or Thread Seal Tape
- Hose or pipe for drain line

## Installation

### **⚠ Caution ⚠**

Due to its weight and size, the system **MUST** be mounted with the provided Mounting Bracket. Read the Mounting the System section before attempting to mount the system. Use care when lifting heavy objects.

### Mounting the System

**NOTE:** Use caution when lifting and mounting the system. The system **MUST** be mounted using the provided Mounting Bracket.

The system comes with a Mounting Bracket. When mounting the system, pay attention to the following guidelines:

- Allow sufficient access for cartridge replacement.

The UFL-510 System should be mounted with 12 inches to the top or bottom of the system.

The UFL-520 system should be mounted with 23 inches to the top or bottom of the system.

The UFL-540 System should be mounted with 43 inches to the top or bottom of the system.

- Mount the system near but NOT above an appropriate electrical outlet.
- Mount the system near a drain for flushing operations.
- Mount the system before all consumable water filtration processes.
- Secure the Mounting Bracket provided with the UFL system into wall studs with heavy duty hardware capable of supporting 120lbs. Or more (Mounting Hardware Not Supplied).
- Mount the UFL system to the Mounting Bracket and secure with heavy duty hardware (Mounting Hardware Not Supplied).

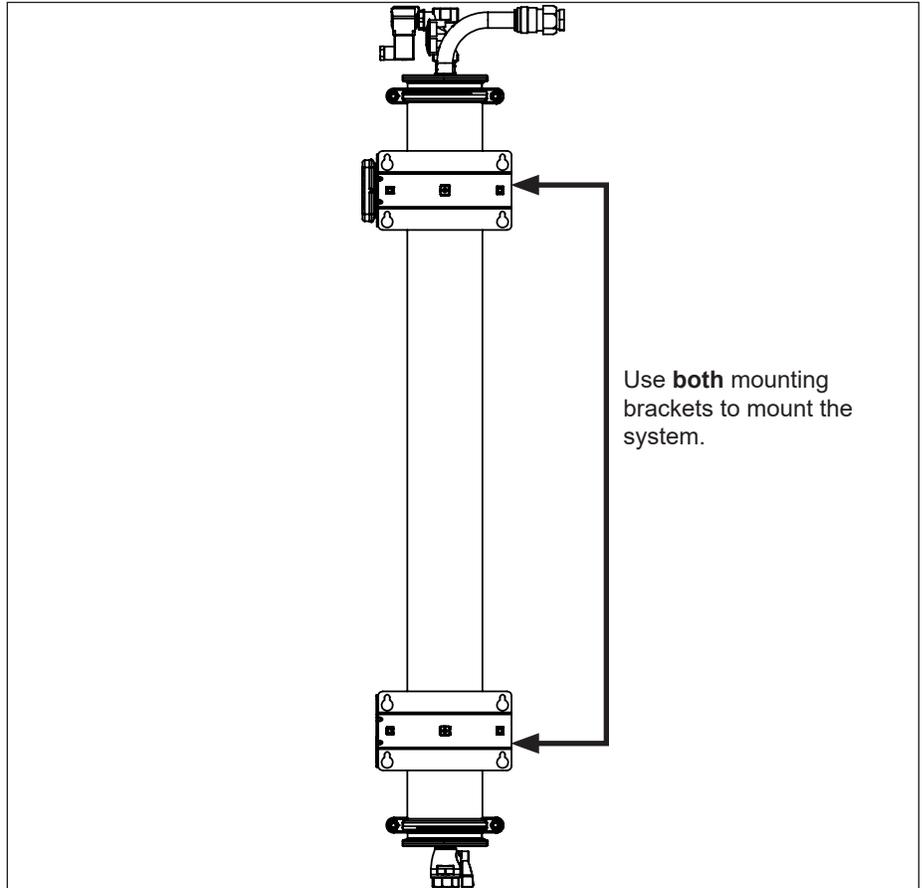


Figure 3. Mounting the System

Follow these steps to secure the Mounting Bracket to the wall:

1. Use a stud finder and level to attach BOTH the top and bottom mounting brackets securely to the wall with the appropriate mounting hardware (Figure 3).

# UFL-500 SERIES

## Drain Valve Connection

The drain is for flushing particle buildup out of the system during self cleaning.

1. Cut a length of tubing (not supplied) so it reaches the drain from the Drain Valve.
2. Connect one end of the hose to the Drain Valve with an appropriate fitting (not supplied) (Figure 4).
3. Direct the other end of the hose to the drain (Figure 4). For hard plumbed drain lines the use of an O-Ring sealed union is recommended (not supplied).

When connecting the drain hose, pay attention to the following guidelines:

- The drain line plumbing must be able support the flow rate whenever the system flushes. This flow rate is dependent on the inlet water pressure, inlet pipe size, and system.

- The drain line leading out of the system must be as short as possible and slope downwards without any kinks or loops.

- The drain line plumbing must be positioned and secured at least 2 inches above the drain (Figure 5). This air gap protects the system from contamination in the event of a backed-up drain.

- The drain used must not be blocked or restricted.

- The drain used must be as large or larger than the drain line plumbing.

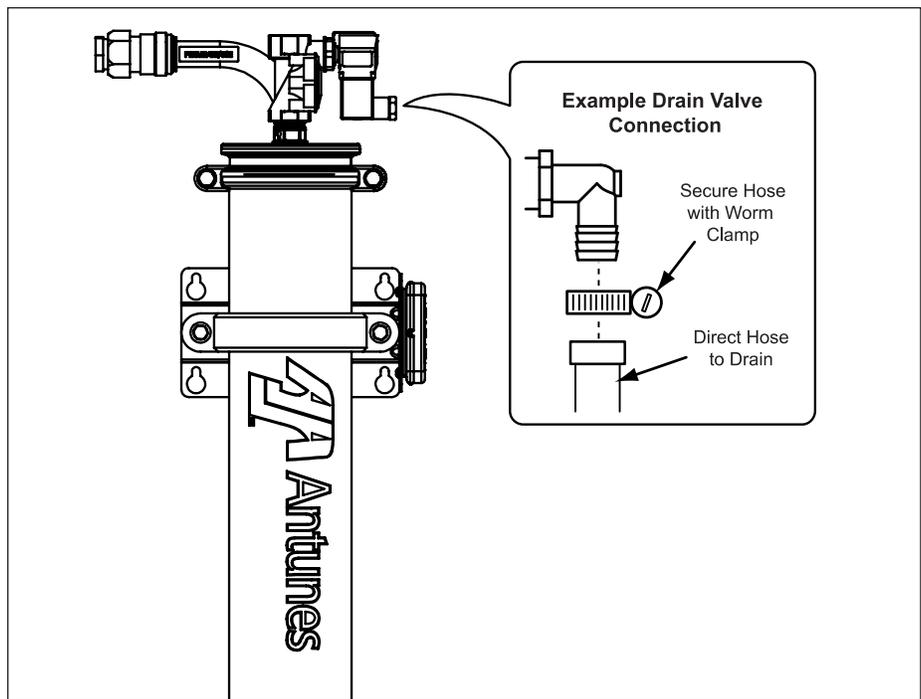


Figure 4. Drain Valve Connection

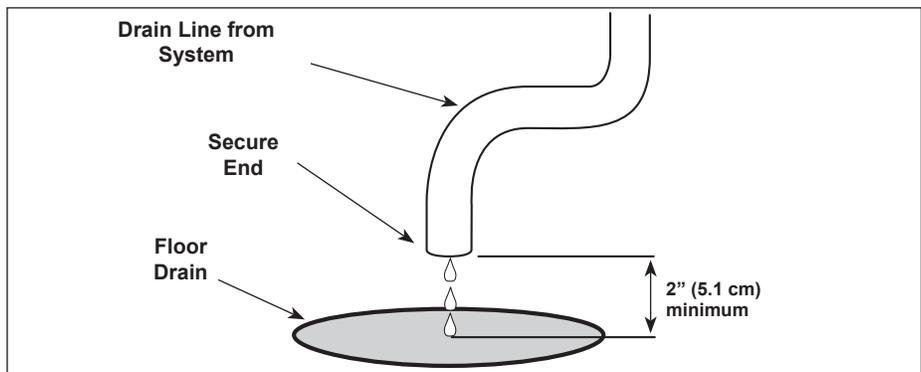
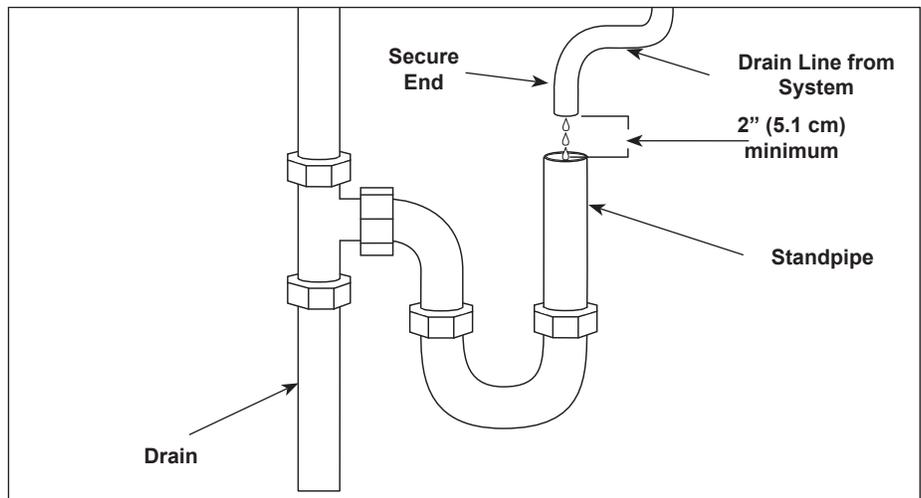


Figure 5. Drain Line Plumbing

## System Inlet Connection

The System Inlet has a 3/4" FNPT thread at the Inlet Valve (Figure 6). DO NOT overtighten fittings as this could cause the plastic ball valve to crack.

Use plastic fittings and a pipe thread sealant approved for use on PVC fittings when making connections.

## Filtered Water Permeate Outlet Connection

The System Outlet has a 3/4" FNPT thread at the Outlet Valve (Figure 6). DO NOT overtighten fittings as this could cause the plastic to crack.

Use plastic fittings and a pipe thread sealant approved for use on PVC fittings when making connections.

**NOTE:** The system is shipped with a plug installed on the filtered water permeate outlet. This plug **MUST** be removed before connecting to the permeate outlet.

## Inlet Water Plumbing

Before connecting the fitting to the System Inlet, the plumbing to the system must be flushed clear of all debris. Hold a bucket at the inlet water line and slowly open the Inlet Water Valve. Allow the pipe to flush until all debris is removed.

## Installing a Bypass

( Not Supplied)

It is recommended that an optional bypass be installed to help with replacing cartridges and servicing the system.

1. Install a ball valve on the outlet of the system, and install tees on the plumbing leading to the Inlet and Outlet Ball Valves.
2. Connect the two tees by installing plumbing and a fully ported (preferably 3/4") Ball Valve.
3. When the system is in use, open the Inlet and Outlet Ball Valves and close the Bypass Ball Valve.
4. When servicing is needed, close the Inlet and Outlet Ball Valves and open the Bypass Ball Valve.

## Starting the Controller

1. Select the proper AC plug for your electrical outlet and install it onto the power supply.
2. Plug the appropriate end of the power cord into the controller.
3. Plug the other end of the power cord into the electrical outlet. The LEDs on the controller will light up.
4. The controller automatically enters Flush Mode and the Flush LED starts to flash.
5. When flushing is complete, the Flush LED will stop flashing and one or more LEDs will remain lit, indicating the unit has power and which interval is selected in the controller.

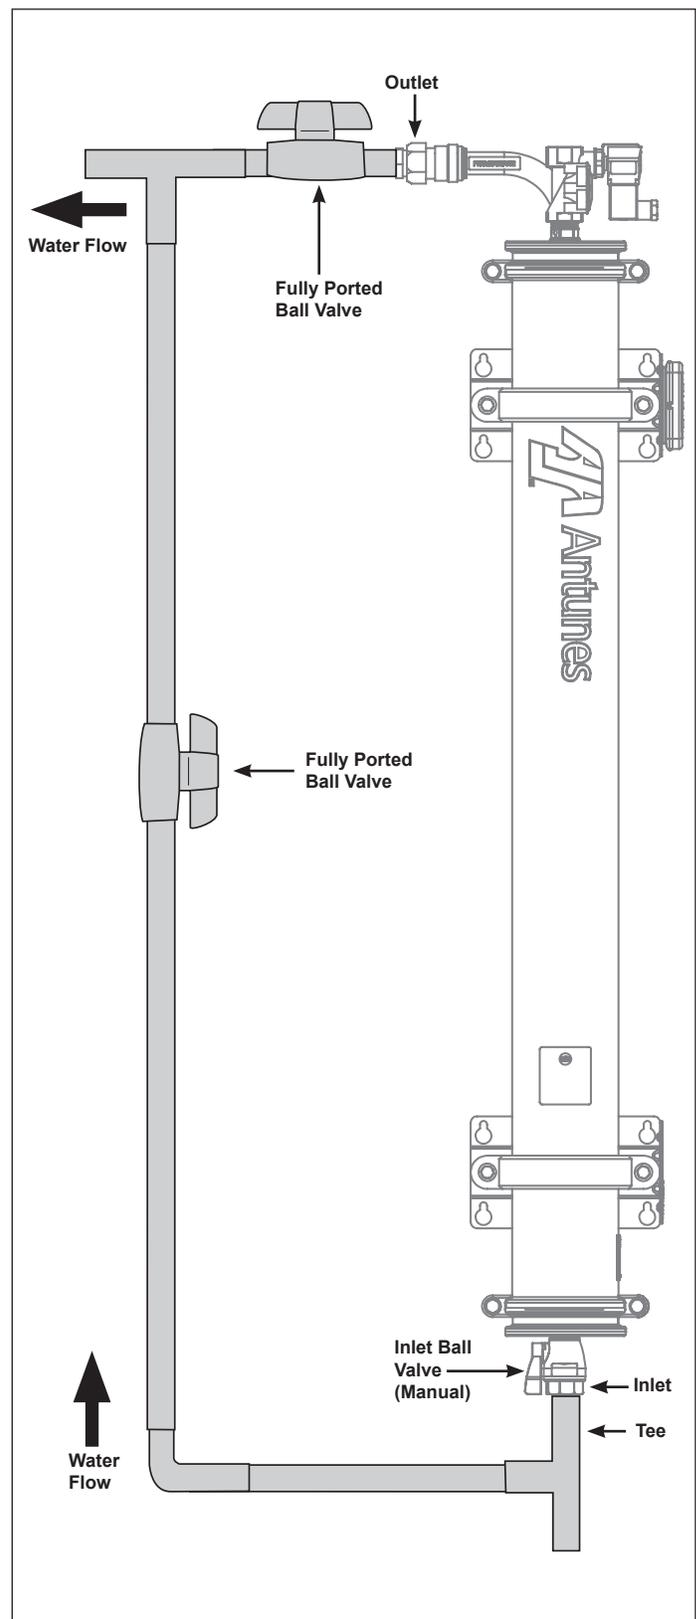


Figure 6. Install Bypass

# UFL-500 SERIES

## Rinsing the UltraFilter Cartridge

The UltraFilter Cartridge comes pre-installed in the UFL system. The UltraFilter Cartridge must be rinsed before the system is used to remove any air and protective solution.

**NOTE:** UltraFilter Cartridge must be rinsed to drain before use. Rinsing to drain removes storage solution and air. **DO NOT** rinse into carbon if present. Carbon life and/or performance may be affected.

**NOTE:** **DO NOT** consume water used during this process.

1. Close the Inlet Ball Valve
2. Direct water from the outlet to a drain.
3. Open the Outlet Ball Valve (if installed).
4. Slowly open the Inlet Ball Valve. Air and water will come out.
5. Press the **FLUSH** button. The Drain Valve will open and air and water will come out of the drain line. Repeat six times to ensure all air and storage solution are flushed out of the UltraFilter Cartridge.
6. Continue to allow water to run at full flow out of the Outlet Ball Valve for at least 15 minutes.
7. After 15 minutes, close the Outlet Ball Valve and allow the system to sit for 15 minutes without any water flow to release any trapped air from the UltraFilter Cartridge.
8. Inspect the unit for any leaks, repairing as needed.
9. After 15 minutes, open the Outlet Ball Valve and wait for 15 more minutes to flush out any remaining air.
10. Close the Outlet Ball Valve.
11. Press the **FLUSH** button to open the Drain Valve. Repeat six times to ensure any remaining air is flushed out of the system.
12. Open the closest downstream tap or faucet.
13. Slowly open the Outlet Ball Valve and allow water to run through the system and out the faucet for five minutes.

## Sanitizing the System and Lines

The plumbing must be sanitized to eliminate possible contamination that may have occurred during the installation process.

One ounce (30 ml) of liquid chlorine bleach (regular bleach, unscented 5.25 % - 6 % sodium hypochlorite) or Kay-5 sanitizer solution (Sodium Dichloro-s-Triazinetrione Dihydrate, 6%) or equivalent can be used to sanitize the plumbing.

The Kay-5 sanitizer solution is made by dissolving a 1 oz. packet of Kay-5 powder in 2 oz. (60 ml) of clean warm water. This can be done by removing 1 inch from the top of the Kay-5 packet and adding the 2 oz. of warm water to the packet. Mix with a coffee stirrer to dissolve. When added to the system, this will create a 60-100 ppm chlorine solution.

**NOTE:** Follow the handling and safety instructions supplied with the sanitizer.

**NOTE:** Sanitizing kit is **NOT** supplied.

1. Follow the steps in the *Rinsing the UltraFilter Cartridge* in the Installation section of this manual.
2. Turn off the water to the system.
3. Open the faucet or tap closest downstream to the system.
4. Allow the system and plumbing to drain.
5. Allow the water to drain out of the system.
6. Pour the sanitizer into the water line supplying the system using a cup or funnel. Be sure to wear protective gear and be careful not to spill the sanitizer onto clothing or skin.
7. Slowly turn on the water supply to the system.
8. Allow water to flow through the system and out of the open faucet or tap until the smell of sanitizer is present.
9. Close the faucet or tap.
10. Let the system stand without water flow for at least 15 minutes to allow the sanitizer to sanitize the pipes.
11. After 15 minutes without water flow, open the faucet or tap.
12. Allow water to flow through the system until the presence of sanitizer is gone.
13. Open all other faucets and taps in line with the system to flush any remaining sanitizer from the plumbing.
14. Close all faucets and taps.

## Maintenance

### Replacing the UltraFilter Cartridge

**NOTE:** Water may drain from the tubing as it is removed. Make sure there is enough room around the system to remove the cartridge.

1. Turn off water to the system by closing the Inlet Ball Valve and Outlet Ball Valve.
2. Press the **FLUSH** button to flush the system and relieve system pressure. Repeat several times.
3. Remove either End Cap clamp hardware from the UltraFilter Housing. (Figure 7)
4. Remove the End Cap (Figure 7) from the UltraFilter Housing.

**NOTE:** If the Cartridge does not easily come out of the Housing, remove the opposite End Cap for assistance.

5. Inspect the End Cap O-Rings and Cartridge O-rings for nicks or cuts. Replace as needed.
6. Record the serial number of the new cartridge. The cartridge serial number is engraved on one end of the outer tube (for example: 05K 12013).
7. Lubricate all O-rings with a food-grade silicone lubricant. Apply a light coating of lubricant to the inside center tube at both ends of the new cartridge.
8. Position the new cartridge into the housing and gently insert into the housing.
9. Ensure the cartridge is fully seated on the opposite end cap.
10. Press the End Cap into position until it is fully seated.
11. Install the UltraFilter Housing clamp and hardware.

**NOTE:** Ensure all of the UltraFilter Housing clamp hardware is properly secured.

12. Rinse the new UltraFilter Cartridge before placing the system back into operation. Follow the Rinsing the UltraFilter Cartridge, Sanitizing the System and Lines, and procedures in the Installation section of this manual to complete the cartridge change.
13. When rinsing is complete, repressurize the system by opening the Outlet Ball Valve then opening the Inlet Ball Valve.

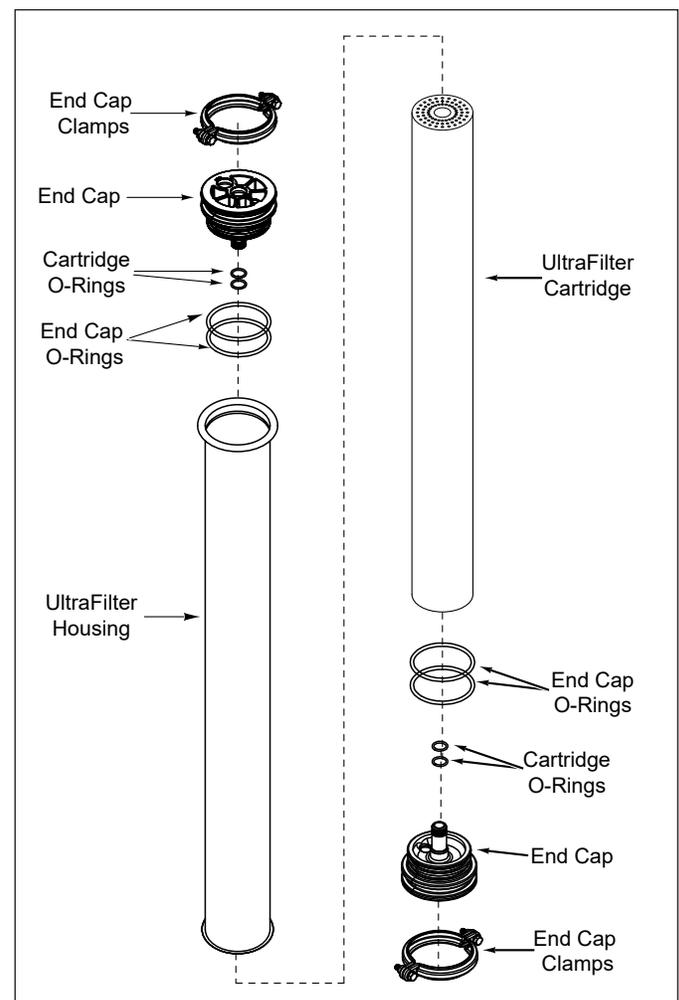


Figure 7. Replacing the UltraFilter Cartridge

# UFL-500 SERIES

## Changing the Interval Setting

### ⚠ Caution ⚠

Changing the flush interval can cause the UltraFilter to plug prematurely and may reduce the life of the filter. Consult the factory for more information

Though not recommended, the interval setting on the Universal Pulse Controller can be changed. If the setting must be changed, use the chart below. Press and hold the corresponding button. After 5 seconds, the Button LED will turn on. After 10 seconds, the Flush LED will also turn on.

| Flush Interval | Button | Hold Time  | Button LED | Flush LED |
|----------------|--------|------------|------------|-----------|
| 15 minutes     | A      | 10 seconds | On         | On        |
| 30 minutes     | B      | 10 seconds | On         | On        |
| 45 minutes     | C      | 10 seconds | On         | On        |
| 1 hour         | A      | 5 seconds  | On         | Off       |
| 4 hour         | B      | 5 seconds  | On         | Off       |
| 6 hours        | C      | 5 seconds  | On         | Off       |
| 12 hours       | D      | 5 seconds  | On         | Off       |
| 24 hours       | D      | 10 seconds | On         | On        |

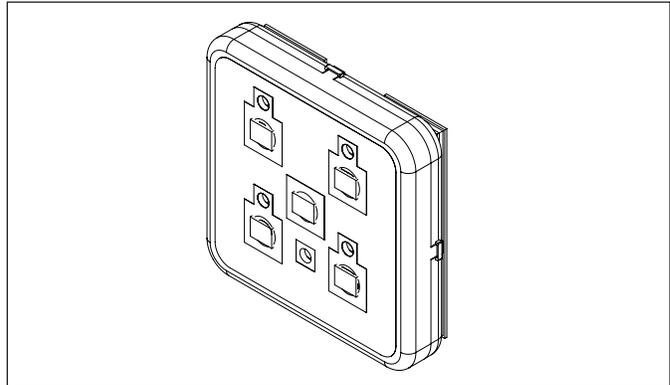


Figure 8. Universal Pulse Controller

## Resetting the Timer Program

During the normal operation, the system will flush according to the set interval. It is possible the system will flush at a time of high water use. If this poses a problem, the controller can be reset. Unplug the power supply, wait for 5 seconds, and then plug the power supply in. When power is restored to the controller, it will automatically enter Flush Mode. The controller will then begin timing from the point when power is restored based on the interval setting selected.

**Troubleshooting**

| <b>Problem</b>   | <b>Possible Cause</b>   | <b>Corrective Action</b>                                      |
|--|---|---|
| Unit does not have power.  | The power cord is not plugged into the appropriate outlet or control box. | Plug power cord into the appropriate outlet.                  |
|  | The unit is plugged into a switched electrical outlet.                    | Plug the power cord into an unswitched outlet.                |
|  | Universal Pulse Controller is inoperable.                                 | Contact your maintenance person or Authorized Service Agency. |
|  | Transformer is defective.   |   |
| No water comes out of the filter system.                                   | Inlet/Outlet Ball Valves closed.  | Open the Inlet/Outlet Ball Valves.                            |
|  | System depressurized.   | Pressurize system.  |
|  | Drain Valve is stuck open.  | Clean, rebuild, and/or replace the Drain Valve.               |
|  | Rinse Ball Valve is open.   | Close the Rinse Ball Valve.                                   |
|  | The system may be in a flush cycle.                                       | Wait for the flush cycle to end.                              |
|  | Inlet Strainer (if installed) is plugged.                                 | Clean or replace Inlet Strainer                               |
|  | UltraFilter Cartridge is plugged.   | Replace UltraFilter Cartridge.                                |
| Low water flow comes out of the filter system.                             | See above.  | See above.  |
|  | The inlet water pressure is too low.                                      | Boost the inlet water pressure.                               |
|  | The outlet check valve may be plugged or defective.                       | Clean or replace the outlet check valve assembly.             |
|  | The inlet flow restrictor may be plugged.                                 | Clean or replace the inlet flow restrictor.                   |
| Water tastes bad.  | Storage/shipping solution not completely rinsed out of the system.        | Rinse the system for a longer period of time.                 |
|  | Biological growth in pipes.   | Sanitize plumbing.  |
|  | Water condition changed.  | Consider installing additional filtration.                    |
|  | Broken capillaries in UltraFilter Cartridge.                              | Replace UltraFilter Cartridge.                                |
| Flush runs continuously.   | Drain Valve stuck open.   | Clean, rebuild, or replace the Drain Valve.                   |
|  | Controller sending continuous signals to valve.                           | Replace the controller.                                       |
| Water splashes at drain during flush.                                      | Drain line not positioned properly.                                       | Reposition the end of the drain line.                         |
|  | Drain not capable of handling high flow rate.                             | Clean drain; find alternate drain.                            |
| Water leaks at ends of the UltraFilter cartridge after changing cartridge. | O-rings are not lubricated.   | Lubricate O-rings with food grade lubricant.                  |
|  | O-rings are split, cut, or twisted.                                       | Replace O-rings.  |
|  | UltraFilter Housing clamps and hardware not properly secured              | Tighten UltraFilter Housing Clamps or replace.                |
| Water leaks from system fitting or connection.                             | Fitting broken or loose.  | Tighten or replace the fitting.                               |
|  | Not enough pipe thread sealant used.                                      | Redo the fitting with the proper amount of sealant.           |

# UFL-500 SERIES

## Replacement Parts

### Parts list

(See Exploded Views for more information)

#### ⚠ NOTICE ⚠

Use only genuine Antunes replacement parts in this unit.  
Use of parts other than those supplied by the manufacturer will void the warranty.

| Item No. | Part #  | Description   | Qty. |
|----------|---------|---|------|
| 1        | 508911  | "Housing 4" DIA x 10" L<br>UFL-510 ONLY"              | 1    |
|          | 508910  | "Housing 4" DIA x 20" L<br>UFL-520 ONLY"              | 1    |
|          | 508919  | "Housing 4" DIA x 40" L<br>UFL-540 ONLY"              | 1    |
| 2        | 508979  | Mounting Bracket                                      | 2    |
| 3        | 2010202 | Tubing, Bend, 90°                                     | 1    |
| 4        | 2170173 | "Valve, Ball, 3/4" CTS X 3/4" FPT,<br>Black, Plastic" | 1    |
| 5        | 2190210 | Fitting, 3/4" MPT X 3/4" CTS Stem,<br>JG              | 1    |
| 6        | 2190158 | Female Connector, 3/4" CTS X 3/4"<br>NPS              | 1    |
| 7        | 3000116 | Retainer Nut- 1/4"-20                                 | 4    |
| 8        | 3000132 | Cage Nut, 8-32, ZP STEEL                              | 2    |
| 9        | 4040189 | VALVE, SOL NC, 24VDC, 3/4 NPT                         | 1    |
| 10       | 7001576 | Universal Pulse Controller                            | 1    |
| 11       | 7001914 | O-Ring Kit, End Cap                                   | 4    |
| 12       | 7001915 | "L-410 Cartridge<br>UFL-510 ONLY"                     |      |
|          | 7001917 | "L-420 Cartridge<br>UFL-520 ONLY"                     |      |
|          | 7001916 | "L-410 Cartridge<br>UFL-540 ONLY"                     | 1    |
| 13       | 7002014 | End Cap Kit, SS Drain                                 | 1    |
| 14       | 7002015 | Clamp Kit, 4" SS UF Housing                           | 2    |
| 15       | 7002016 | Clamp Kit - UFL Housing                               | 2    |
| 16       | 7002017 | Rubber Cradle Kit, SS Housing                         | 2    |
| 17       | 7002057 | Kit, UFL-510 5 GPM End Cap                            | 1    |
|          | 7002058 | Kit, UFL-520 8 GPM End Cap                            |      |
|          | 7002059 | Kit, UFL-540 15 GPM End Cap                           |      |



## Limited Warranty

Equipment manufactured by Antunes) has been constructed of the finest materials available and manufactured to high quality standards. These units are warranted to be free from defects in materials and workmanship for a period of one year from date of purchase under normal use and service, and when installed in accordance with manufacturer's recommendations\*. The ultra filtration membrane cartridge is warranted under the same terms and conditions on a prorated basis for 36 months from date of purchase.

\*To ensure continued proper operation of the units, follow the maintenance procedure outlined in the Owner's Manual.

1. This warranty does not cover failures due to improper system installation, defects caused by improper storage or handling prior to placing of the equipment into service. This warranty does not include overtime charges or work done by unauthorized service agencies or personnel. This warranty does not cover normal maintenance, calibration, or regular adjustments as specified in operating and maintenance instructions of this manual, and/or labor involved in moving adjacent objects to gain access to the Equipment.
2. Antunes reserves the right to make changes in design or add any improvements on any product. The right is always reserved to modify equipment because of factors beyond our control and government regulations. Changes to update equipment DO NOT constitute a warranty charge.
3. **If shipment is damaged in transit, the purchaser should make a claim directly upon the carrier. Careful inspection should be made of the shipment as soon as it arrives and visible damage should be noted upon the carrier's documentation. Damage should be reported to the carrier. This damage is not covered under this warranty.**
4. THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EACH OF WHICH IS HEREBY EXPRESSLY DISCLAIMED. THE REMEDIES DESCRIBED ABOVE ARE EXCLUSIVE AND IN NO EVENT SHALL ANTUNES BE LIABLE FOR SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THE BREACH OR DELAY IN PERFORMANCE OF THIS WARRANTY.
5. Prices and specifications are subject to change without notice.



### Corporate Headquarters

180 Kehoe Blvd.  
Carol Stream, IL 60188, USA  
Phone: +1 (630) 784-1000  
Toll Free: +1 (800) 253-2991  
Fax: +1 (630) 784-1650

### China Facility

2# Building North, 89 Songshan Rd.  
Shishan Industrial Complex Park  
New District, Suzhou, China  
Phone: +86 512-6841-3637  
Fax: +86 512-6841-3907

### India Facility

Antunes NADI Manufacturing  
India Pvt. Ltd.  
57-58 Thattankulam Road,  
Madhavaram  
Chennai, India 600060